

PORTOFINO Installation Instructions

Header Mount

POCKET DOOR - PLAN 3B




<p>PLAN 3B</p> <p>SYSTEM WIDTH (S/W)</p> <p>ELEVATION A</p>	<p>SECTION B</p> <p>SYSTEM HEIGHT (S/H)</p> <p>PANEL HEIGHT = $S/H - 2 \frac{9}{16}''$</p> <p>PORTOFINO Px-SCG Single Track - Vertical Mount - Floor Guides</p>	<p>SYSTEM PARTS</p> <div> <p>STANDARD STILE</p> </div> <div> <p>TOP TRACK 2 X</p> </div> <div> <p>POCKET JAMB GUIDES</p> </div> <div> <p>STANDARD INSERTS</p> <ul style="list-style-type: none"> <input type="checkbox"/> DIFFUSED WHITE LAMI GLASS <input type="checkbox"/> CLEAR LAMINATED GLASS <input type="checkbox"/> MIRROR <input type="checkbox"/> PREFINISHED HARDBOARD <input type="checkbox"/> MIRROR / HARDBOARD </div> <div> <p>CUSHION CAPTURE ROLLER ASSEMBLY (SHOWN WITH SINGLE TOP TRACK)</p> </div>	<p>OPTIONAL PARTS</p> <div> <input type="checkbox"/> <p>BLACK ANODIZED FINISH</p> </div> <div> <p>2-1/4\"/> </p></div> <div> <p>SPECIAL INSERTS</p> <ul style="list-style-type: none"> <input type="checkbox"/> POLAR WHITE GLASS <input type="checkbox"/> BLACK GLASS <input type="checkbox"/> CUSTOMER SUPPLIED INSERT <input type="checkbox"/> DIVISION BARS </div> <div> <p>LOCK EDGE PULL</p> </div>
<p>PROJECT:</p> <p>ARCHITECT:</p> <p>Riviera ALLIANCE GLASS DOORS INC. Surrey, BC, Canada, V3W 1A2 T: 604.501.2588 F: 604.501.1608</p>	<p>SHEET: _____ JOB #: _____</p>	<p>DRAWN BY: JL DATE: 05/14/21</p>	<p>CHECKED BY: DL</p>

PLEASE NOTE: "x" in the product code refers to the stile options - Standard LINE = "11"; SYSTEM 214 = "214"







Portofino - System Components

- 1 - Top Track
- 2 - Cushion Capture
- 3 - Roller
- 4 - Adjusting Bolt
- 5 - Hanger Lock
- 6 - Door Guide

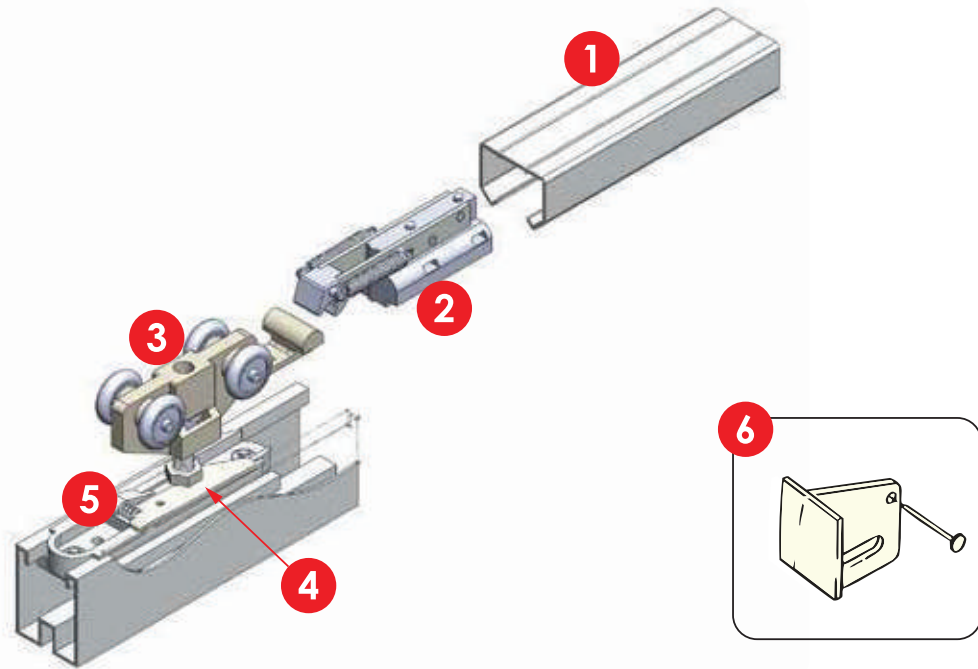



General

- A - "T" Stile
- B - System 214 Wide 2 1/4" Stile **
- C - Sidelite Shoe
- D - System 214 Lock
- E - System 214 Edge Pull

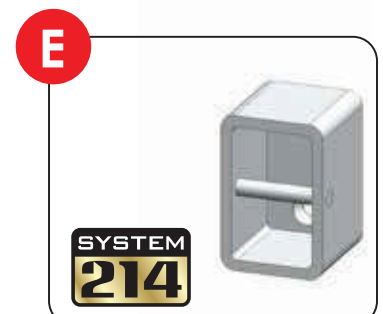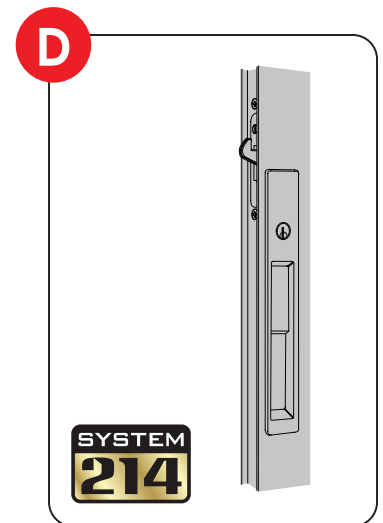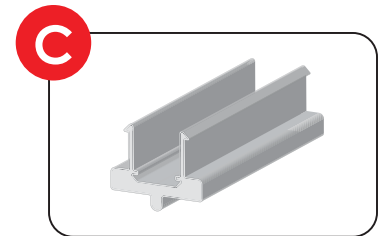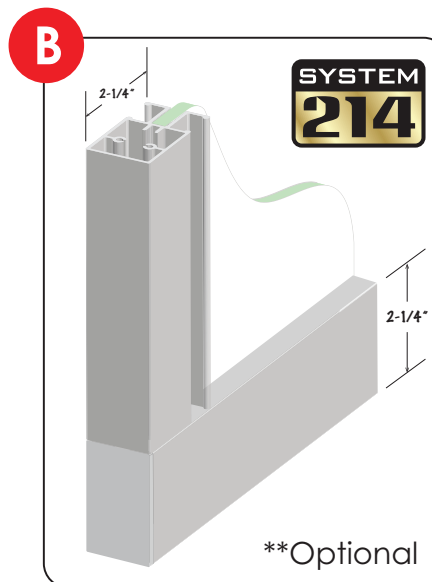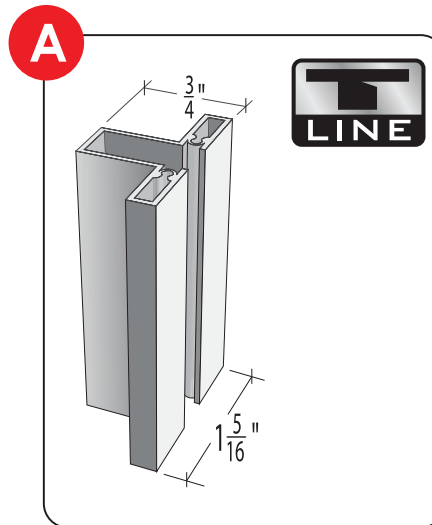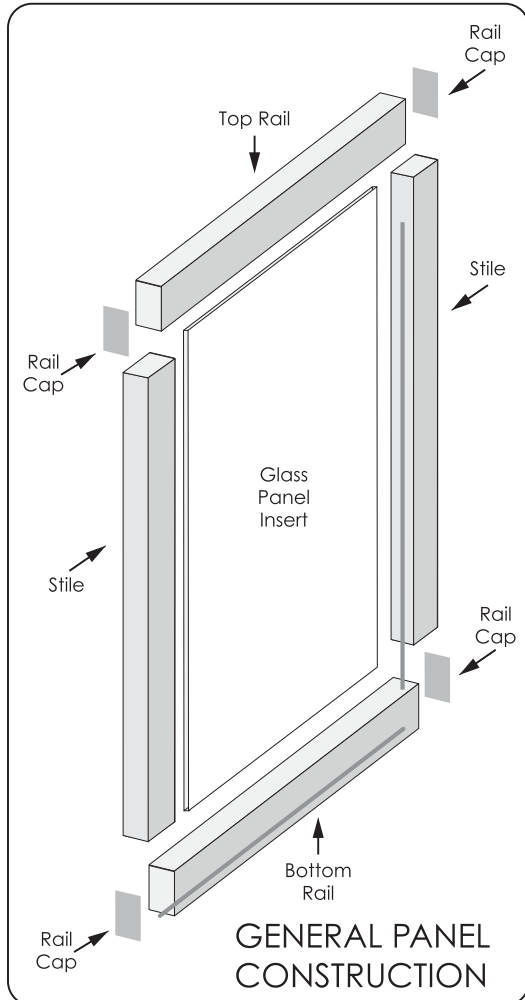

A Installation Using RIVIERA Supplied Top Track cont.

- 6 Lift the panel(s) up and engage each roller adjusting bolt head into its hanger lock by pushing bolt against spring lock until it latches. Adjust roller bolt vertically using the combination wrench/screwdriver tool provided, to adjust floor clearance and vertically align panels with wall edge. Panel stopping location can be fine tuned by loosening the two screws A & B in the cushion capture mechanism and moving to desired position along the track.
- 7 Install 2 piece door guide by nailing each guide to each jamb at the bottom of the frame snug with bottom door rail.
- 8 Trim out the rest of the opening stops as usual

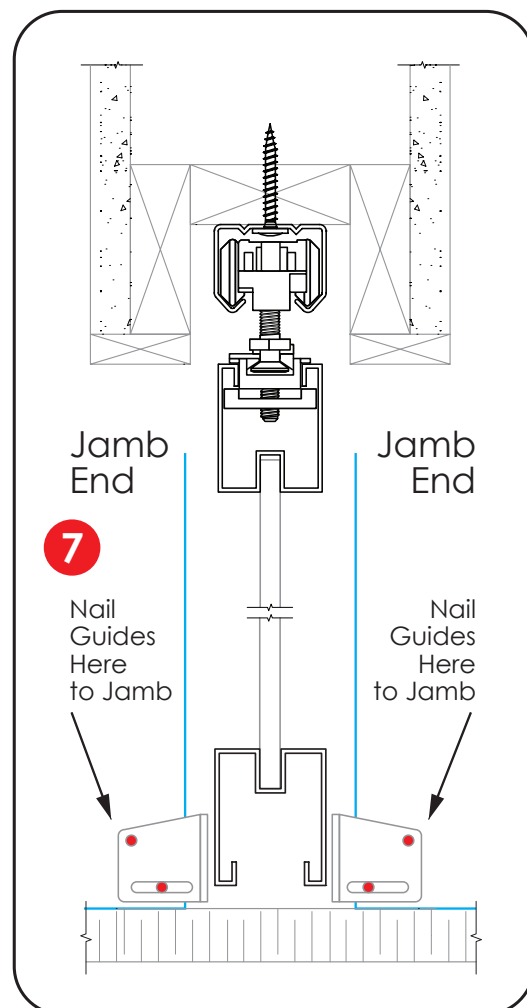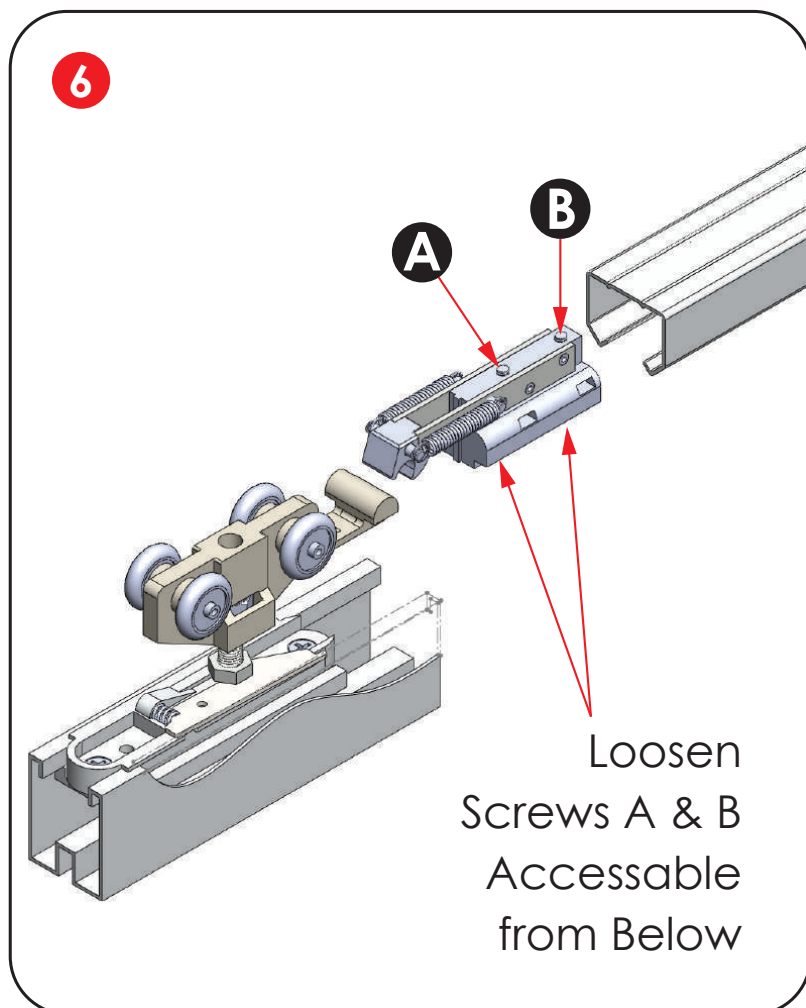

B Installation Using Existing Pocket Frame Manufacturer's Supplied Top Track (Retrofitting)

9 Be sure to order your Portofino panels with "wooden hanger blocks" installed.


Carefully remove stop trim and de-install existing door(s). You will utilize the existing track (A), rollers (B) and panel hanger brackets (C) from the existing system. Cushion Capture is not available in this application.

10 Install existing panel hanger brackets in the wooden hanger blocks in the top rail of the Portofino panel. Lift the panel(s) up and engage each roller adjusting bolt head into its hanger bracket. Adjust roller bolt vertically to adjust floor clearance and vertically align panels with wall edge then lock in place. Install 2 piece door guide by nailing each guide to each jamb at the bottom of the frame snug with bottom door rail. Re-trim the opening stops as previous.

9


**Portofino Panel
Top Rail with "wooden
hanger blocks" installed**

(set back 2" from ends)

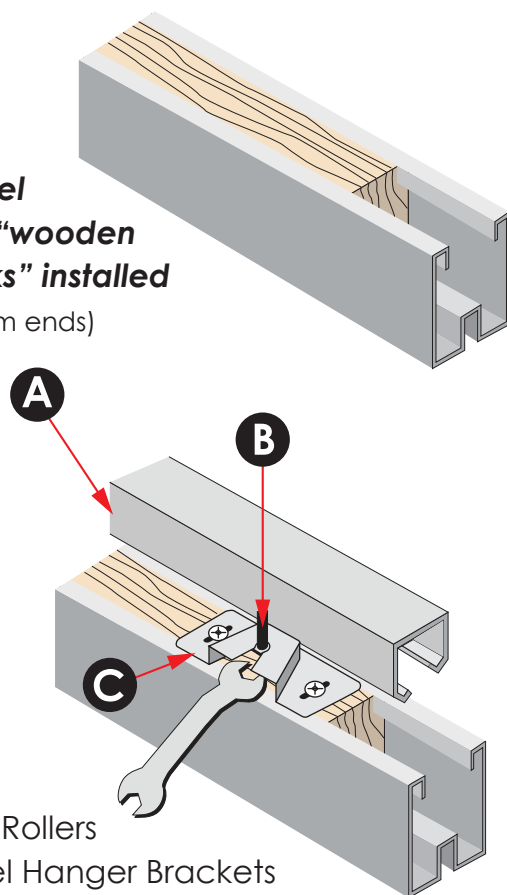

(A) Track, (B) Rollers
and (C) Panel Hanger Brackets
from the existing system

10

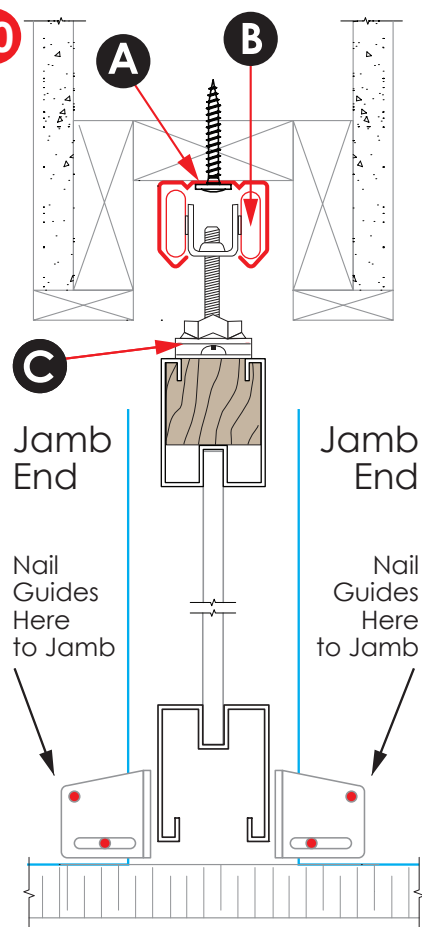

Jamb
End

Jamb
End

Nail
Guides
Here
to Jamb

Nail
Guides
Here
to Jamb

Riviera Glass Dividers are warranted to be free of defects in material and workmanship for a period of one year. Product reported as defective are subject to inspection and validation by an authorized representative. Alliance Glass Doors Inc. will repair, replace or refund the original cost of the parts, at its option. Remedies do not include glass breakage (by any cause), labour, installation costs, finishing costs, indirect or consequential damages.